

Portable Unit

Assembly & Operating Instructions

Unpacking and Assembly Instructions

Unit comes in 3 boxes



- Bag Filter
- Cart
- Unit




Unpack Unit





Mount Frame on Cart (Hardware in Accessory Box)

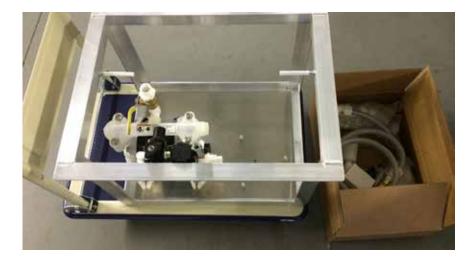




Mount Filter on Frame (Attach Piping to Inlet of the Pump)





Attach to Inlet of Pump

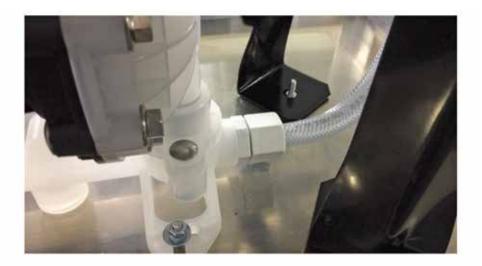

Install Vacuum Gauge on Filter (Gauge in Accessory Box)





Install Pressure Gauge on Regulator (Gauge in Accessory Box)





Install Muffler on Pump Exhaust (Muffler in Accessory Box)






Unpack Coalescing Tank





Place Coalescing Tank on Frame

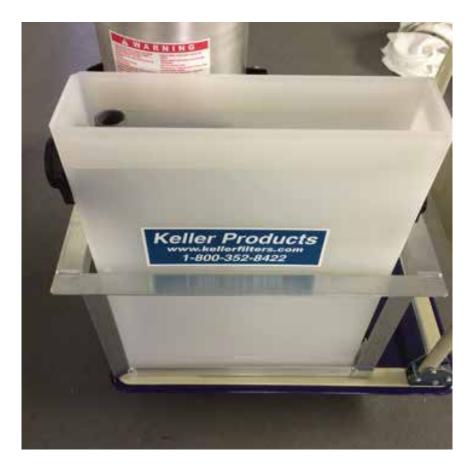



Attach Clear Hose to Top of the Coalescing Pack





Place Coalescing Pack in Tank





Place Hose Through Cover, Attach to Discharge of Pump






Attach Tank Drain & Oil Drain to Rear of Coalescing Tank





Attach Oil Drain Hose

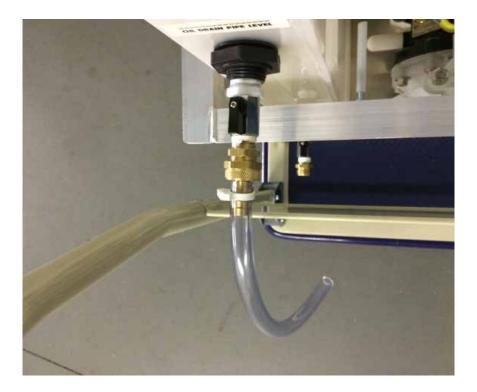



Attach 1.5" Quick Disconnect Fitting to Clean Coolant Overflow Port





Finished Unit with Accessories





Finished Unit with Accessories





315, 365, 457, & 465 PARTS LIST

INLET DEVICE RSM-3 BT-12 YAZ-8 555-GIH-FT 555-GIH-WF	Adjustable Floating Inlet Narrow Adjustable Floating Inlet Fixed Inlet Gray Inlet Hose Gray Inlet Hose w/ Fittings	\$125.00 \$125.00 \$125.00 \$8.00/foot \$60.00
EXTENDER HOSE		4474474444444444444
555-203-4	4 Foot Extender Hose	\$65.00
PRE-FILTER ASSEMBLY RBP-25 22-175-N RAP-25 22-475-N	25 Micron Filter O-Ring 25 Micron Filter (315) O-Ring (315)	\$40.00/pack (5) \$21.95 each \$40.00/pack (5) \$23.00 each
AIR DIAPHRAGM PUMP		
555-200-G 555-G-832	1⁄2" Air Pump Liquid Side Kit	\$525.00 \$295.00
555-G-833	Air Side Kit	\$150.00
GPM-038	Generic Pump Muffler	\$27.00
COALESCING PACK		
555-040 555-030	315/365 Coalescing Pack 457 Coalescing Pack	\$600.00 \$800.00
555-060	465 Coalescing Pack	\$1200.00
CLEAN COOLANT OUTLET		
555-300H 22-G12	1 ½" Outlet Hose Bulkhead Gasket	\$8.50/foot \$15.00 each
		4.2.00 Guon

Operating Instructions

Locate a good spot in the sump to place the inlet device. The top lip of the inlet device should be visible above the fluid level.




Connect the inlet device hose to the bag pre-filter inlet. If additional hose length is required, use the optional extender hose supplied with the unit.





Connect discharge hose for return to sump.

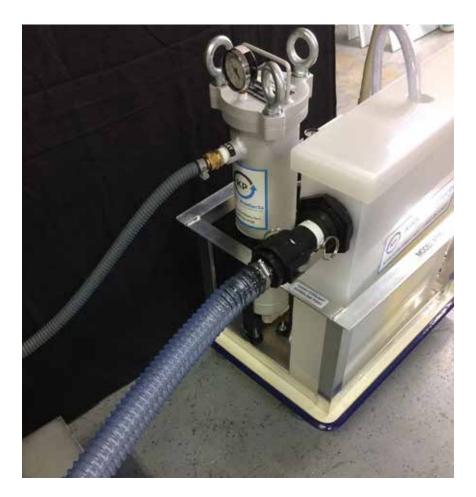



Place discharge hose return back in sump.



Place quick disconnect fitting on air inlet.






Connect shop air line to unit.





Set $\frac{1}{2}$ " ball value on the discharge of the pump to a 45° angle, to control the speed of the pump.

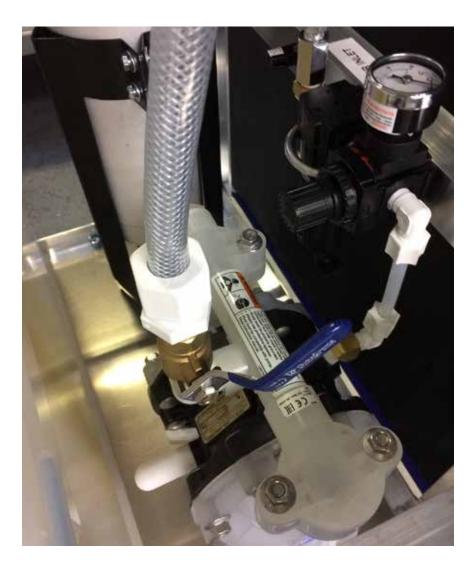

IMPORTANT NOTE

The pump is self-priming, although it is common to fill the pre-filter housing with water or coolant prior to starting the unit. Once the Keller separator tank fills to the overflow fitting, clean coolant will start returning back to the sump. The big item to watch for are air bubbles on the surface of the coolant in the Keller unit. It should be possible to run the Keller system with little, if any air entering the separator tank. A bubble here or there is not an issue. If the tank is boiling away, that is undesirable, since it will interfere with oil separation. Excessive air introduction is caused either by a loose connection on the suction side of the pump, or by running the unit too fast. Go back and check fittings and connections from the sump to the pump to make sure they are snug.







Phone: 1-800-352-8422 Fax: (978) 264-0221 info@kellerfilters.com www.kellerfilters.com